

Code 3000LR

Low Range
Peracetic Acid
50 Test Strips




Insta-Test ANALYTIC

Low Range Peracetic Acid



Using a cup-size sample, immerse strip. Remove with **pad face up. DO NOT SHAKE OFF EXCESS WATER.** With pad still facing up, **wait 10 seconds and compare to color chart.** Discard strip after 30 seconds.

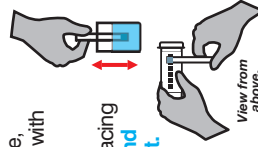

View from above.

- Keep wet fingers out of the bottle.
- Cap bottle tightly after removing strip.
- Store in a cool, dry place.



Lamotte Company
802 Washington Ave., Chestertown, MD 21620 USA
410-778-3100 • www.lamotte.com



6 37395 44877 5

Drop holding box and dotted tolerance line