

Code 3002

High Range
Chlorine Dioxide
50 Test Strips




InstaTest[®] ANALYTIC

High Range Chlorine Dioxide



Using a cup-size sample, immerse strip for **2 seconds**. Remove strip with **pad face up. DO NOT SHAKE OFF EXCESS WATER**. With pad still facing up, **wait 10 seconds and read the strip**. Discard strip after 30 seconds.

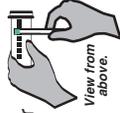

!Keep wet fingers out of the bottle.

!Cap bottle tightly.

!Store in a cool, dry place.

!In concentrations greater than 500 ppm the pad will be a mottled color of golden-brown and black.

LaMotte Company
Chestertown, MD 21620
www.lamotte.com

View from above.

