


Code 2964-G


Free Chlorine
25 Test Strips



Insta-Test[®] ANALYTIC



Using a cup-size sample, dip strip for **2 seconds**. Remove strip with **pad face up**. **DO NOT SHAKE OFF EXCESS WATER**. With pad still facing up, read immediately. Discard strip after 30 seconds.

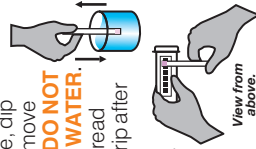

View from above.

Note: Pad may appear light pink when strip is removed from vial. Pad color will not affect reacted test results.

- Keep wet fingers out of the bottle.
- Cap bottle tightly after removing strip.
- Store in a cool, dry place.



LaMotte Company, Chestertown, MD 21620

<http://www.lamotte.com>

